


Siesta Blinds Fitting Instructions



1. Your blind box should contain a main cassette, two side rails and one bag of screws.



2. Firstly you need to clean the window with a dry cloth to remove any dust, or other material.

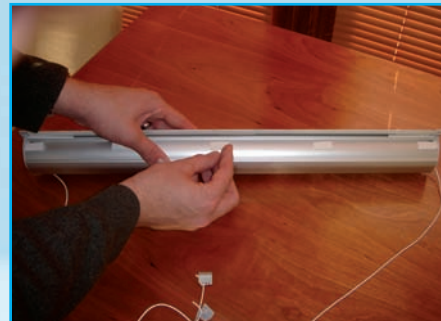

3. Unwind the strings on either end of the main cassette and remove the backing paper from the adhesive pads.




4. Place the cassette in the top of the sash with the adhesive pads in contact with the timber. Hold firmly for 5 seconds to enable the pads to bond to the timber.



5. Screw one of the supplied screws into either side of the cassette through the plastic brackets. This can be done using a manual or a powered screwdriver.



6. Lock in the side rails to the main cassette making sure the plastic runner on either end is in the side rail groove. Attach the screws through the predrilled holes on the side rails.

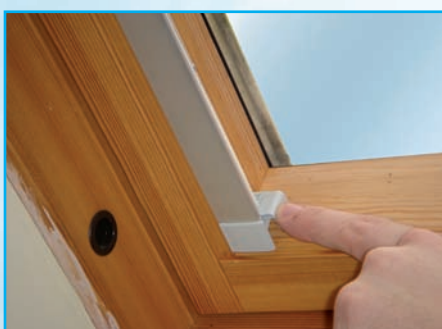

7. Clip the plastic ends of the string into the plastic bracket at the bottom of the side rails.



8. Test the operation of the blind by closing it fully and then opening fully again.



For information on more of our accessories available for your Keylite Roof Window, visit www.keylite.co.uk